
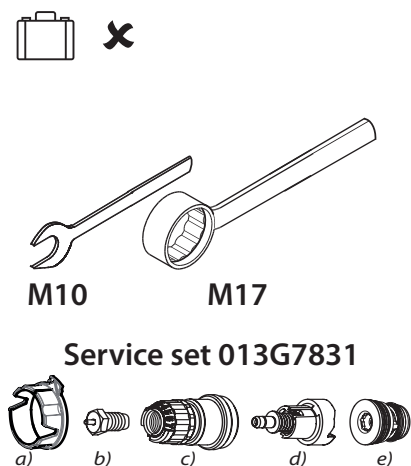



# RA-DV *Dynamic Valve*™ Demounting Tool




## User Guide

ENGINEERING  
TOMORROW

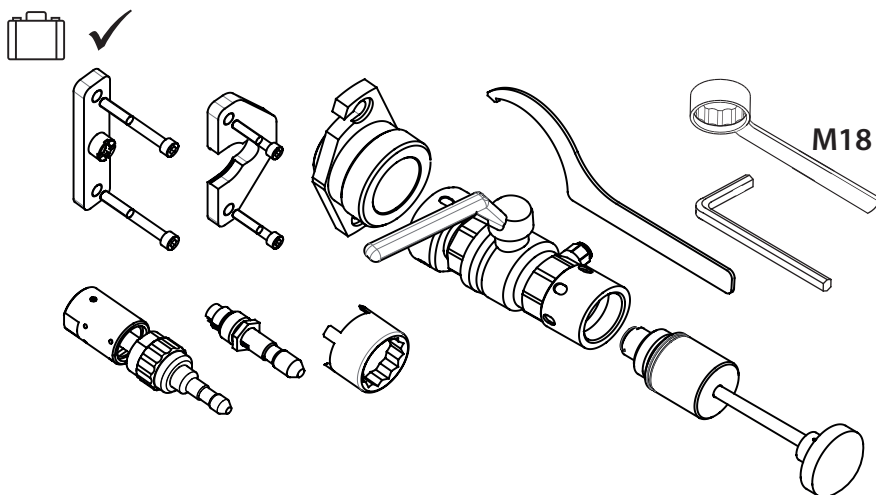


Turn OFF the pump before starting, max 3 bar pressure.

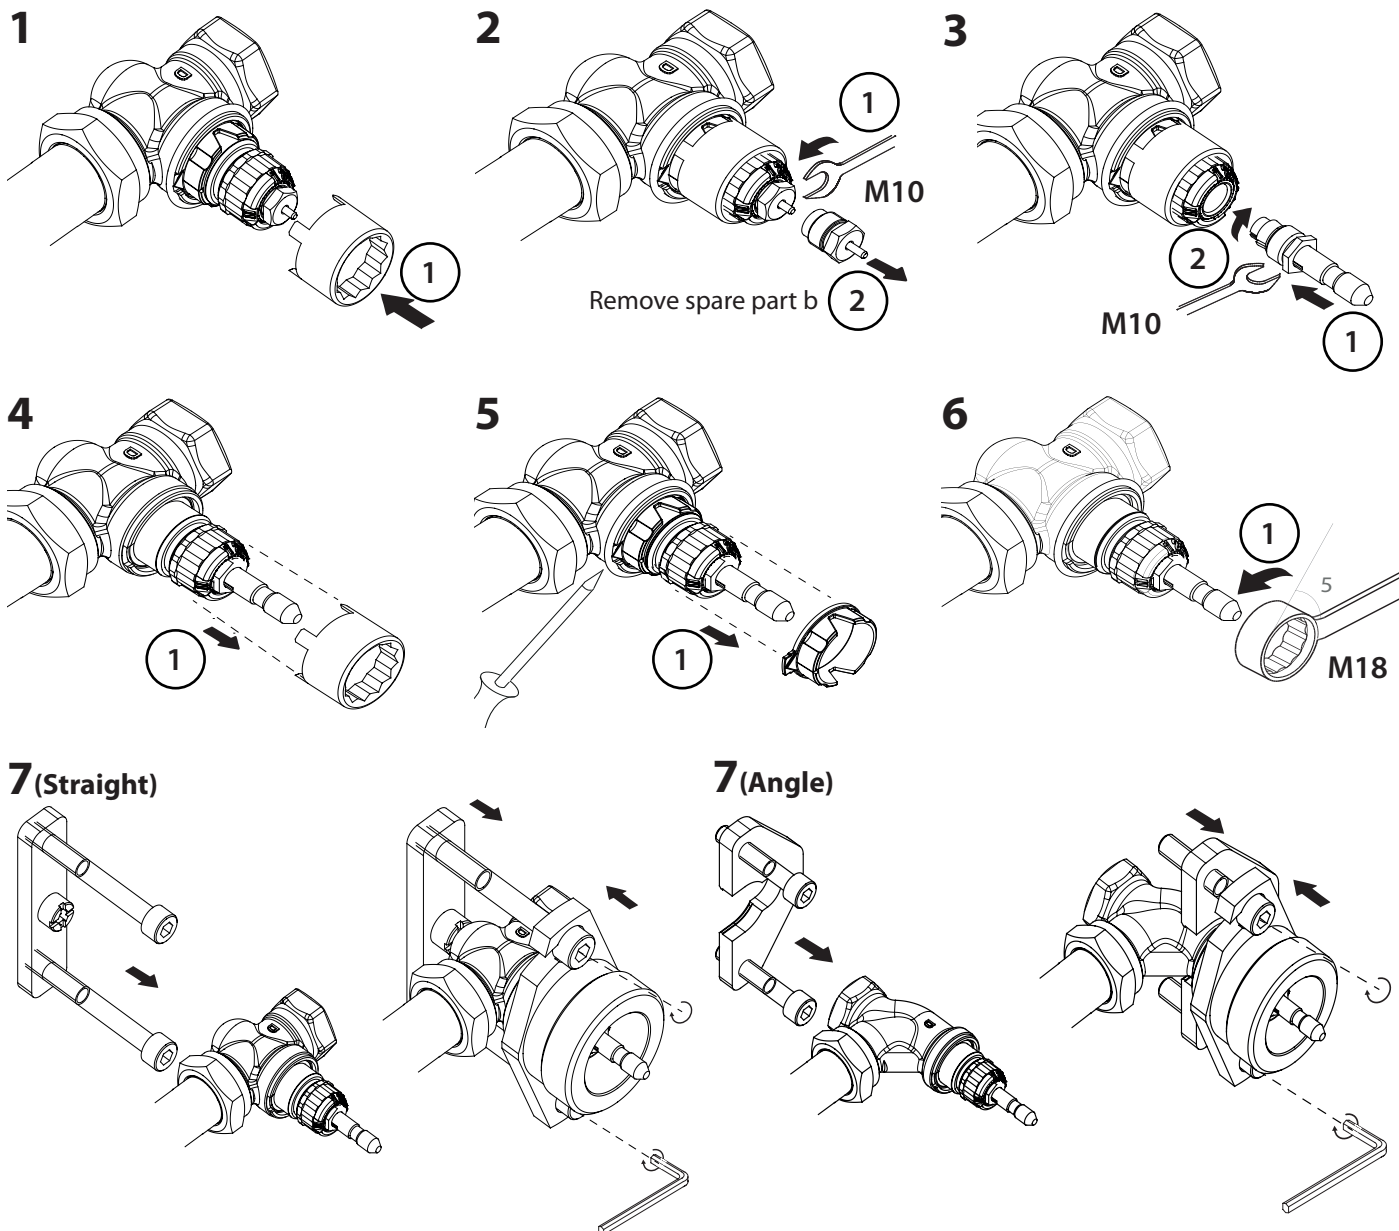


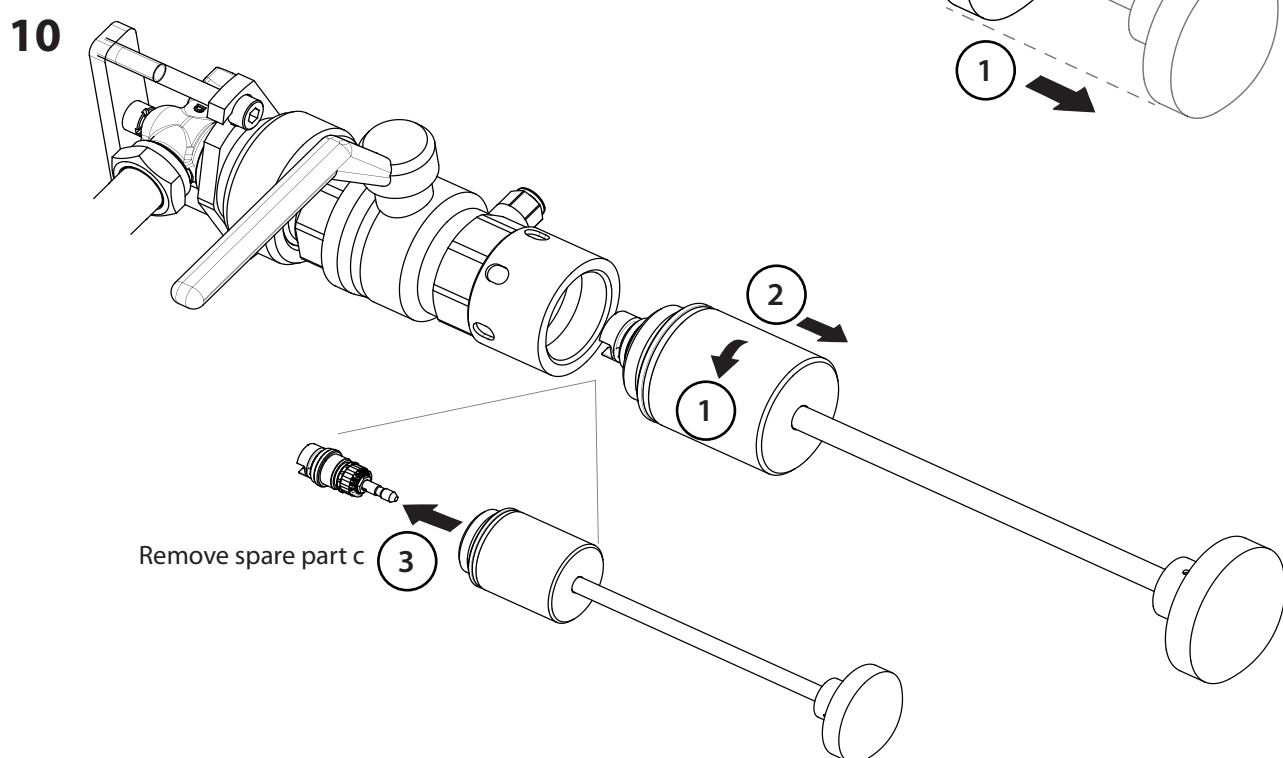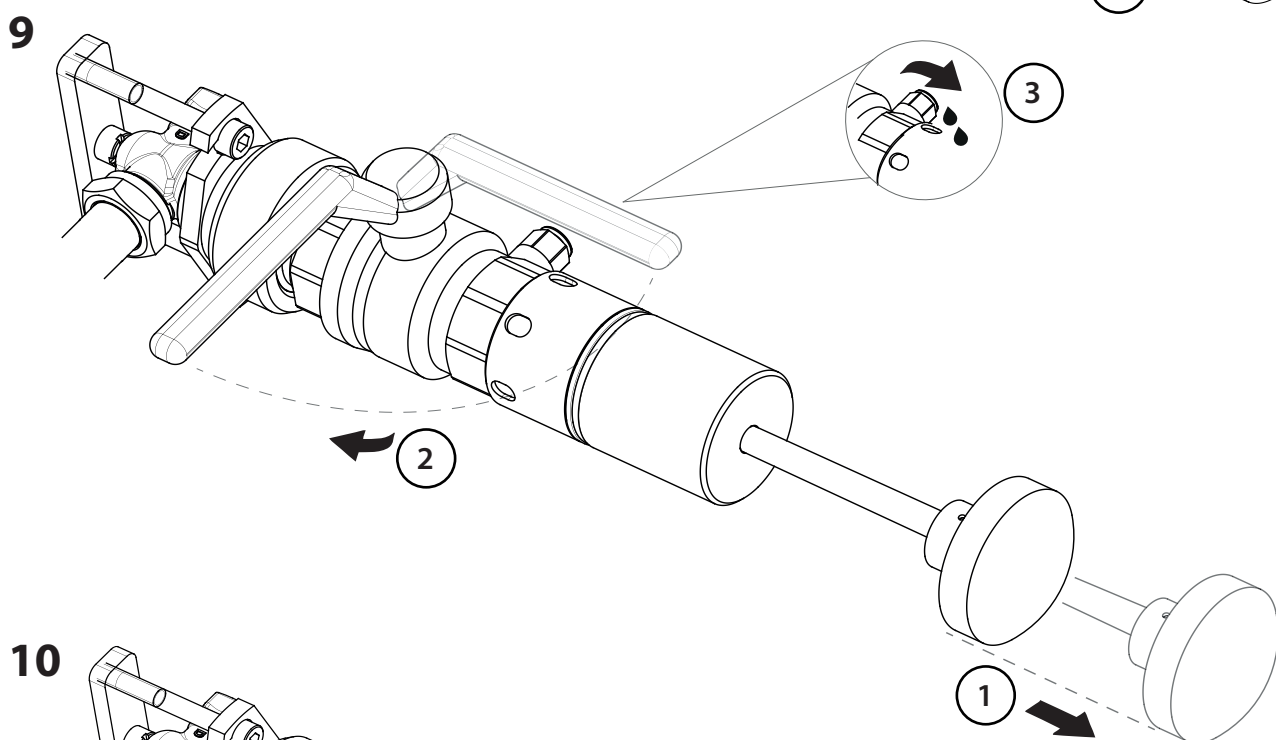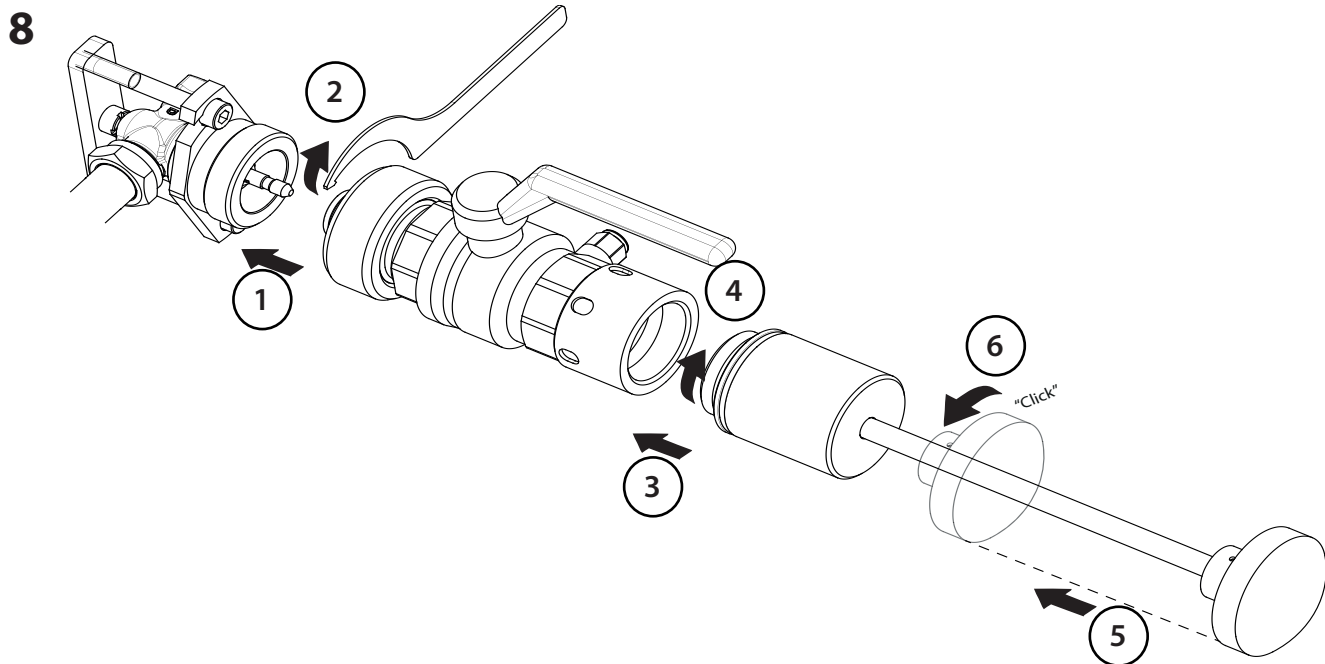


11

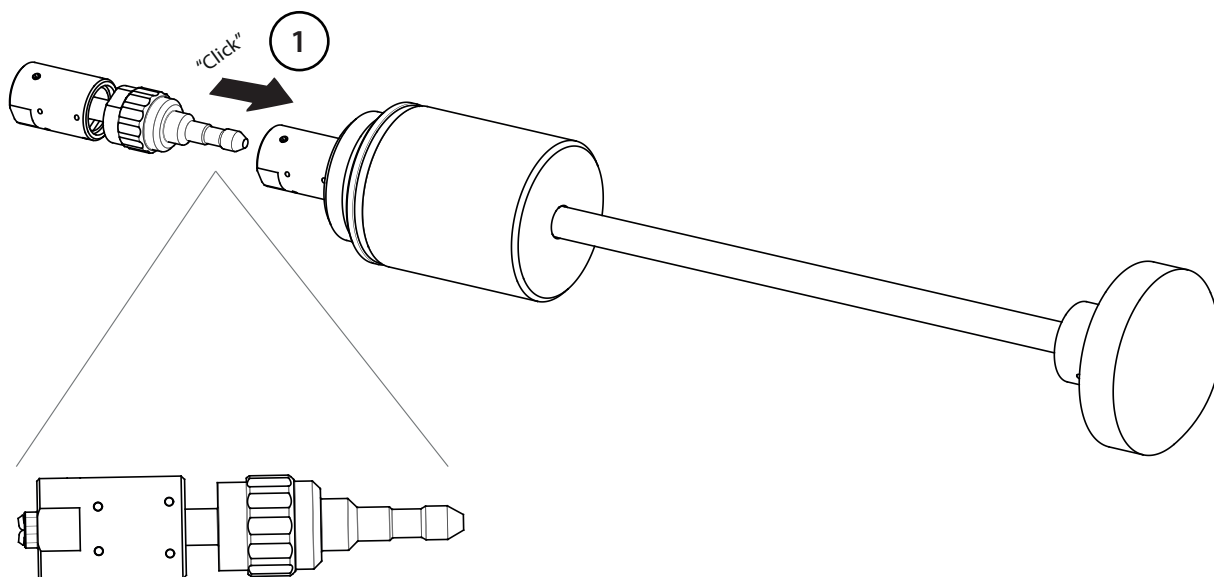


12

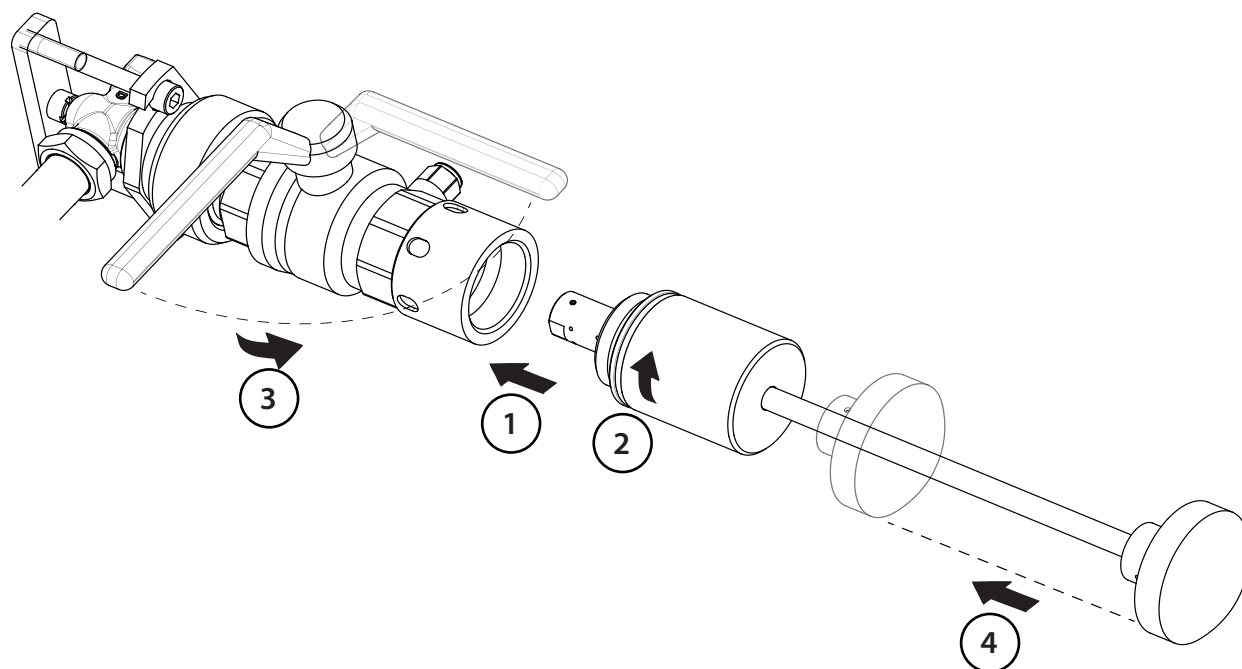


13

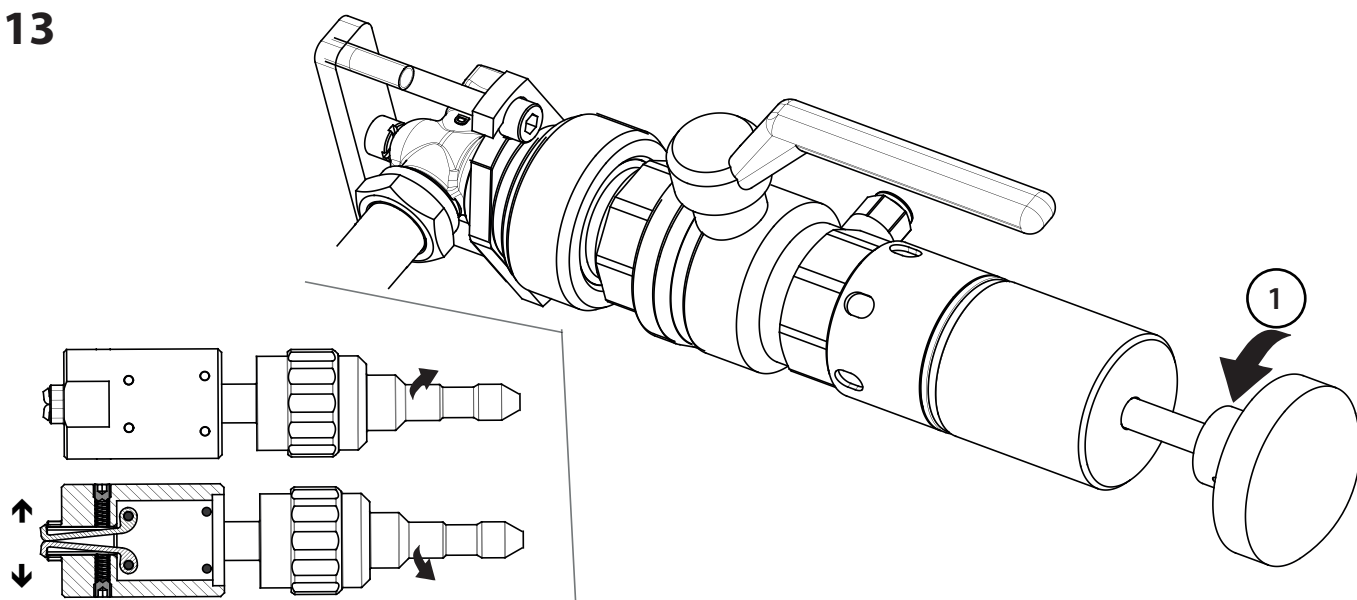

14

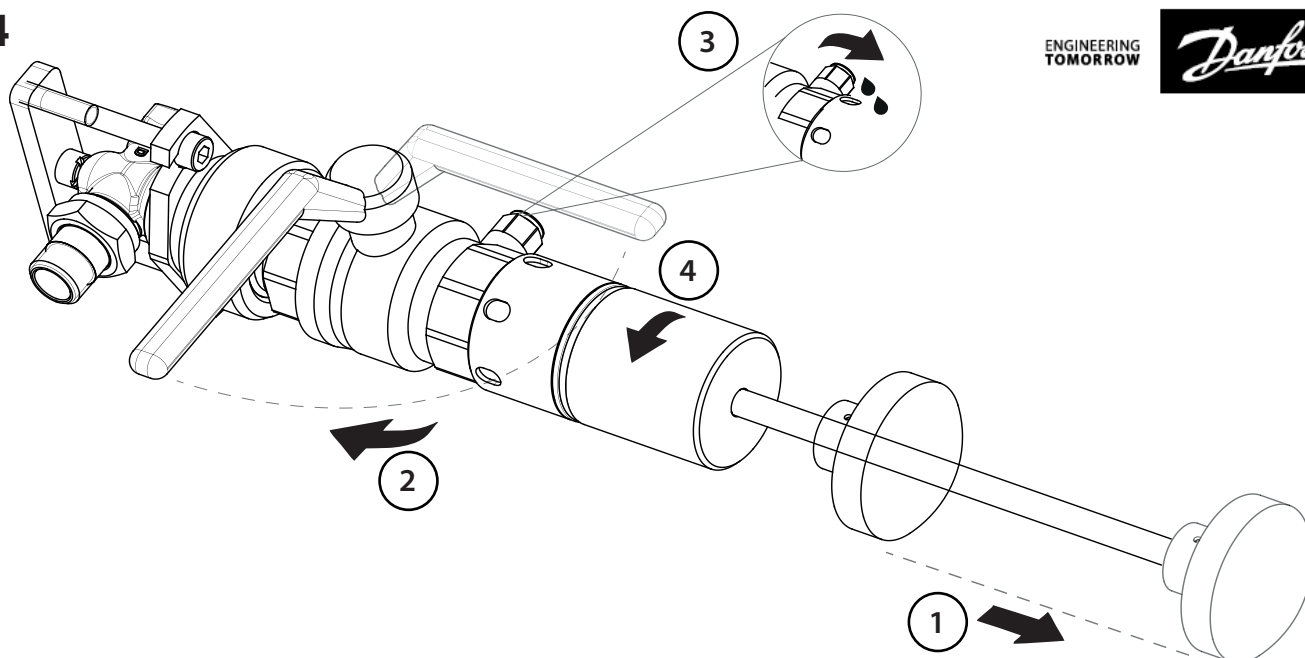ENGINEERING  
TOMORROW

15

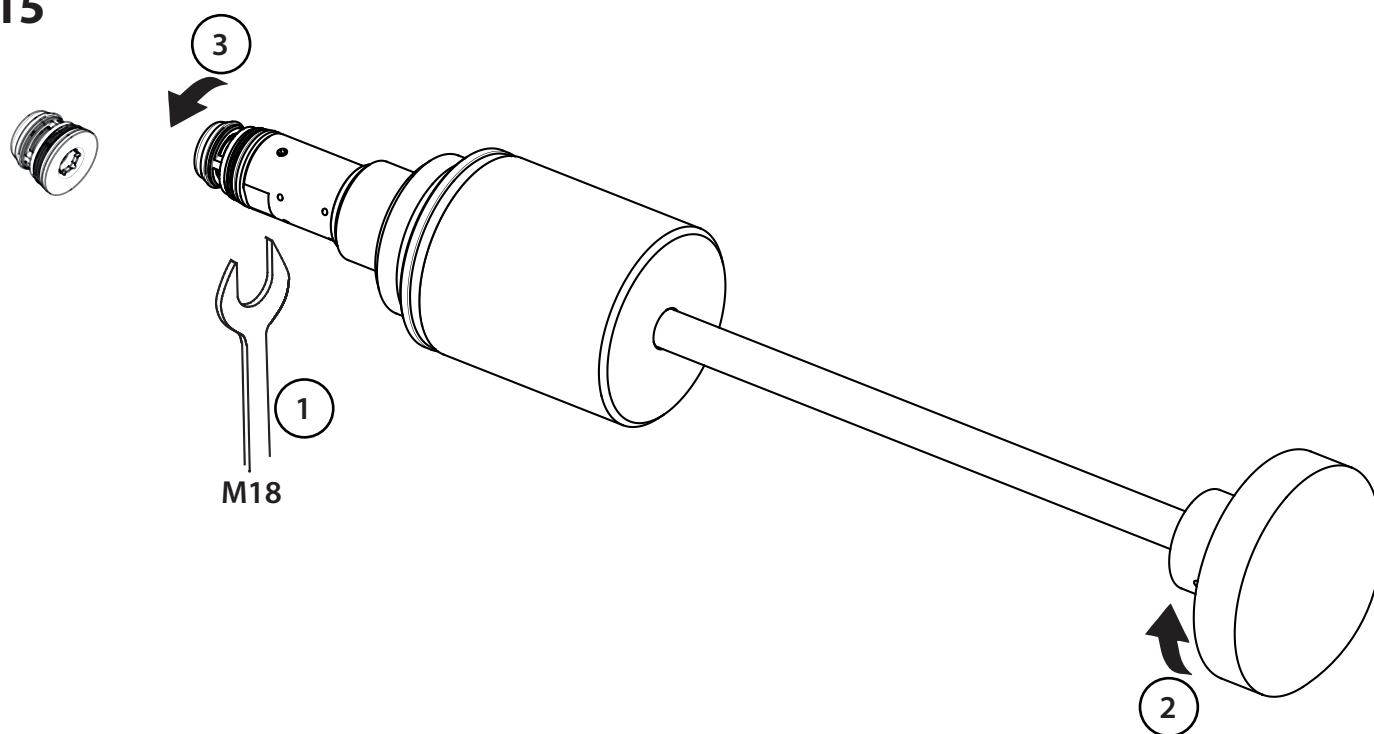

Danfoss A/S  
Heating Solutions  
Haarupvaenget 11  
8600 Silkeborg  
Denmark  
Email: [heating.solutions@danfoss.com](mailto:heating.solutions@danfoss.com)  
[www.heating.danfoss.com](http://www.heating.danfoss.com)

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

013R9638 - AN47723968375300-000101

© Danfoss 01/2024

4